

Maintenance Tables - Normal Service

7,500-37,500 [45,000-75,000](#) [82,500-112,500](#) [120,000](#)

| Maintenance Items | 7,500 | 15,000 | 22,500 | 30,000 | 37,500 |
|---------------------------------------|-----------------------|------------------------|------------------------|------------------------|------------------------|
| Air Filter Element | | | | Replace | |
| Automatic Transmission Fluid | | Inspect | | Inspect | |
| Ball Joint Dust Cover, Lower | | Inspect | | Inspect | |
| Ball Joint Dust Cover, Upper | | Inspect | | Inspect | |
| Ball Joint, Lower | | Inspect | | Inspect | |
| Ball Joint, Upper | | Inspect | | Inspect | |
| Brake Drum | | Inspect | | Inspect | |
| Brake Hose | | Inspect | | Inspect | |
| Brake Line | | | | Inspect | |
| Brake Pad | | Inspect | | Inspect | |
| Brake Rotor/Disc | | Inspect | | Inspect | |
| Brake Shoe | | Inspect | | Inspect | |
| Brakes | | Check | | Check | |
| Constant Velocity Joint Boot | | Inspect | | Inspect | |
| Coolant | | | | Replace | |
| Differential Fluid | | Inspect | | Inspect | |
| Drive Belt | | | | | |
| Evaporative Emission Control Canister | | | | | |
| Exhaust System | | Inspect | | Inspect | |
| Fuel Delivery and Air Induction | | | | Inspect | |
| Fuel Filler Cap | | | | Inspect | |
| Fuel Supply Line | | | | Inspect | |
| Manual Transmission Fluid | | | | Inspect | |
| Oil | Replace | Replace | Replace | Replace | Replace |
| Oil Filter, Engine | Replace | Replace | Replace | Replace | Replace |
| Spark Plug | | | | | |
| Steering | | Inspect | | Inspect | |
| Steering and Suspension | | Inspect | | Inspect | |
| Tires | Rotate | Rotate | Rotate | Rotate | Rotate |
| Valve Clearance | | | | | |

[7,500-37,500](#) 45,000-75,000 [82,500-112,500](#) [120,000](#)

| Maintenance Items | 45,000 | 52,500 | 60,000 | 67,500 | 75,000 |
|------------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|
| Air Filter Element | | | Replace | | |
| Automatic Transmission Fluid | Inspect | | Inspect | | Inspect |
| Ball Joint Dust Cover, Lower | Inspect | | Inspect | | Inspect |
| Ball Joint Dust Cover, Upper | Inspect | | Inspect | | Inspect |
| Ball Joint, Lower | Inspect | | Inspect | | Inspect |
| Ball Joint, Upper | Inspect | | Inspect | | Inspect |
| Brake Drum | Inspect | | Inspect | | Inspect |
| Brake Hose | Inspect | | Inspect | | Inspect |
| Brake Line | | | Inspect | | |
| Brake Pad | Inspect | | Inspect | | Inspect |
| Brake Rotor/Disc | Inspect | | Inspect | | Inspect |
| Brake Shoe | Inspect | | Inspect | | Inspect |
| Brakes | Check | | Check | | Check |
| Constant Velocity Joint Boot | Inspect | | Inspect | | Inspect |
| Coolant | | | Replace | | |
| Differential Fluid | Inspect | | Inspect | | Inspect |
| Drive Belt | | | Inspect | | Inspect |

| | | | | | |
|---------------------------------------|---------|---------|---------|---------|---------|
| Evaporative Emission Control Canister | | | Inspect | | |
| Exhaust System | Inspect | | Inspect | | Inspect |
| Fuel Delivery and Air Induction | | | Inspect | | |
| Fuel Filler Cap | | | Inspect | | |
| Fuel Supply Line | | | Inspect | | |
| Manual Transmission Fluid | | | Inspect | | |
| Oil | Replace | Replace | Replace | Replace | Replace |
| Oil Filter, Engine | Replace | Replace | Replace | Replace | Replace |
| Spark Plug | | | Replace | | |
| Steering | Inspect | | Inspect | | Inspect |
| Steering and Suspension | Inspect | | Inspect | | Inspect |
| Tires | Rotate | Rotate | Rotate | Rotate | Rotate |
| Valve Clearance | | | Inspect | | |

[7,500-37,500](#) [45,000-75,000](#) 82,500-112,500 [120,000](#)

| | | | | | |
|---------------------------------------|------------------------|------------------------|------------------------|-------------------------|-------------------------|
| Maintenance Items | 82,500 | 90,000 | 97,500 | 105,000 | 112,500 |
| Air Filter Element | | Replace | | | |
| Automatic Transmission Fluid | | Inspect | | Inspect | |
| Ball Joint Dust Cover, Lower | | Inspect | | Inspect | |
| Ball Joint Dust Cover, Upper | | Inspect | | Inspect | |
| Ball Joint, Lower | | Inspect | | Inspect | |
| Ball Joint, Upper | | Inspect | | Inspect | |
| Brake Drum | | Inspect | | Inspect | |
| Brake Hose | | Inspect | | Inspect | |
| Brake Line | | Inspect | | | |
| Brake Pad | | Inspect | | Inspect | |
| Brake Rotor/Disc | | Inspect | | Inspect | |
| Brake Shoe | | Inspect | | Inspect | |
| Brakes | | Check | | Check | |
| Constant Velocity Joint Boot | | Inspect | | Inspect | |
| Coolant | | Replace | | | |
| Differential Fluid | | Inspect | | Inspect | |
| Drive Belt | | Inspect | | Inspect | |
| Evaporative Emission Control Canister | | | | | |
| Exhaust System | | Inspect | | Inspect | |
| Fuel Delivery and Air Induction | | Inspect | | | |
| Fuel Filler Cap | | Inspect | | | |
| Fuel Supply Line | | Inspect | | | |
| Manual Transmission Fluid | | Inspect | | | |
| Oil | Replace | Replace | Replace | Replace | Replace |
| Oil Filter, Engine | Replace | Replace | Replace | Replace | Replace |
| Spark Plug | | | | | |
| Steering | | Inspect | | Inspect | |
| Steering and Suspension | | Inspect | | Inspect | |
| Tires | Rotate | Rotate | Rotate | Rotate | Rotate |
| Valve Clearance | | | | | |

[7,500-37,500](#) [45,000-75,000](#) [82,500-112,500](#) 120,000

| | |
|------------------------------|-------------------------|
| Maintenance Items | 120,000 |
| Air Filter Element | Replace |
| Automatic Transmission Fluid | Inspect |
| Ball Joint Dust Cover, Lower | Inspect |

| | |
|---------------------------------------|---------|
| Ball Joint Dust Cover, Upper | Inspect |
| Ball Joint, Lower | Inspect |
| Ball Joint, Upper | Inspect |
| Brake Drum | Inspect |
| Brake Hose | Inspect |
| Brake Line | Inspect |
| Brake Pad | Inspect |
| Brake Rotor/Disc | Inspect |
| Brake Shoe | Inspect |
| Brakes | Check |
| Constant Velocity Joint Boot | Inspect |
| Coolant | Replace |
| Differential Fluid | Inspect |
| Drive Belt | Inspect |
| Evaporative Emission Control Canister | Inspect |
| Exhaust System | Inspect |
| Fuel Delivery and Air Induction | Inspect |
| Fuel Filler Cap | Inspect |
| Fuel Supply Line | Inspect |
| Manual Transmission Fluid | Inspect |
| Oil | Replace |
| Oil Filter, Engine | Replace |
| Spark Plug | Replace |
| Steering | Inspect |
| Steering and Suspension | Inspect |
| Tires | Rotate |
| Valve Clearance | Inspect |