

Maintenance: Normal Service 30000 MI or 48000 KM

Check

- (S) Brakes

Inspect brake linings/drums and brake pads/discs

Inspect

- (S) Automatic Transmission Fluid

Ball Joint Dust Cover, Lower

Ball Joint Dust Cover, Upper

Ball Joint, Lower

Ball Joint, Upper

Brake Drum

- (S) Brake Hose

Inspect brake hoses and lines

Brake Line

Brake Pad

Brake Rotor/Disc

Brake Shoe

- (S) Constant Velocity Joint Boot

- (S) Differential Fluid

- (B) Exhaust System

Inspect exhaust pipes and mountings

- (S) Fuel Delivery and Air Induction

Inspect fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses

- (S) Fuel Filler Cap

Fuel filler cap gasket. Inspect fuel filler cap gasket

- (E) Fuel Supply Line

Inspect the vehicles fuel lines and connections, fuel tank band and the fuel tank vapor vent system hoses.

- (S) Manual Transmission Fluid

- (S) Steering

Inspect the vehicles steering gear box, steering wheel, linkage and boots. Inspect steering gear box and steering linkage

- (S) Steering and Suspension

Inspect ball joints and dust covers

Replace

- (S) Air Filter Element

- (B) Coolant

- (B) Oil

- (B) Oil Filter, Engine

Rotate

- (S) Tires

(S) = Service Warranty Requirement

(E) = Emission Warranty Requirement

(B) = Both Service and Emission Warranty Requirement