

## Maintenance: Normal Service 60000 MI or 96000 KM

### Check

- (S) Brakes  
*Inspect brake linings/drums and brake pads/discs*

### Inspect

- (S) Automatic Transmission Fluid
- Ball Joint Dust Cover, Lower
- Ball Joint Dust Cover, Upper
- Ball Joint, Lower
- Ball Joint, Upper
- Brake Drum
- (S) Brake Hose  
*Inspect brake hoses and lines*
- Brake Line
- Brake Pad
- Brake Rotor/Disc
- Brake Shoe
- (S) Constant Velocity Joint Boot
- (S) Differential Fluid
- (S) Drive Belt  
*Inspect all drive belts*
- Evaporative Emission Control Canister  
*Inspection required in California, Massachusetts and New York*
- (B) Exhaust System  
*Inspect exhaust pipes and mountings*
- (S) Fuel Delivery and Air Induction  
*Inspect fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses*
- (S) Fuel Filler Cap  
*Fuel filler cap gasket. Inspect fuel filler cap gasket*
- (E) Fuel Supply Line  
*Inspect the vehicles fuel lines and connections, fuel tank band and the fuel tank vapor vent system hoses.*
- (S) Manual Transmission Fluid
- (S) Steering  
*Inspect the vehicles steering gear box, steering wheel, linkage and boots. Inspect steering gear box and steering linkage*
- (S) Steering and Suspension  
*Inspect ball joints and dust covers*
- (S) Valve Clearance

### Replace

- (S) Air Filter Element
- (B) Coolant
- (B) Oil
- (B) Oil Filter, Engine
- (B) Spark Plug  
*Replace platinum and non-platinum spark plugs*

### Rotate

- (S) Tires

-----  
(S) = Service Warranty Requirement

(E) = Emission Warranty Requirement

(B) = Both Service and Emission Warranty Requirement