

Maintenance: Normal Service 75000 MI or 120000 KM

Check

- (S) Brakes

Inspect brake linings/drums and brake pads/discs

Inspect

- (S) Automatic Transmission Fluid

Ball Joint Dust Cover, Lower

Ball Joint Dust Cover, Upper

Ball Joint, Lower

Ball Joint, Upper

Brake Drum

- (S) Brake Hose

Inspect brake hoses and lines

Brake Pad

Brake Rotor/Disc

Brake Shoe

- (S) Constant Velocity Joint Boot

- (S) Differential Fluid

Drive Belt

- (B) Exhaust System

Inspect exhaust pipes and mountings

- (S) Steering

Inspect the vehicles steering gear box, steering wheel, linkage and boots. Inspect steering gear box and steering linkage

- (S) Steering and Suspension

Inspect ball joints and dust covers

Replace

- (B) Oil

- (B) Oil Filter, Engine

Rotate

- (S) Tires

(S) = Service Warranty Requirement

(E) = Emission Warranty Requirement

(B) = Both Service and Emission Warranty Requirement