

Maintenance: Severe Service 15000 MI or 24000 KM

Check

Brakes

Inspect linings/drums and pads/discs

Inspect

(E) Air Filter Element

Ball Joint Dust Cover, Lower

Ball Joint Dust Cover, Upper

Ball Joint, Lower

Ball Joint, Upper

Body and Frame

Inspect nuts and bolts on chassis and body Inspect the nuts and bolts on the chassis and body.

Brake Drum

Brake Hose

Inspect Brake hoses and lines

Brake Line

Brake Pad

Brake Rotor/Disc

Brake Shoe

Constant Velocity Joint Boot

Drive/Propeller Shaft

Inspect the vehicles driveshaft boots.

Exhaust System

Inspect exhaust pipes and mountings

Steering

Inspect steering gear box Inspect the vehicles steering gear box. Inspect the vehicles steering wheel, linkage and boots.

(S) Steering and Suspension

Inspect ball joints and dust covers, inspect steering linkage

Replace

(S) Automatic Transmission Fluid

(S) Differential Fluid

(B) Oil

(S) Oil Filter, Engine

Rotate

Tires

(S) = Service Warranty Requirement

(E) = Emission Warranty Requirement

(B) = Both Service and Emission Warranty Requirement