## Page 1 of 2

## **Fuse Block**

2. CDS 3.ABS NO. 1 4. RDI 5. HEAD LH-LWR 6. HEAD RH-UPR 7. MMT	FE   G   H     13   14   15     13   14   15     16   17   18   19   20   21   27     16   17   19   20   21   27   27   16     16   17   18   19   20   21   27	
9. ABS NO. 2 10 11. HEAD LH-UPR 12. HEAD RH-LWR 13. SPARE 14. SPARE 15. SPARE 16. MAIN 17. IG2 18. ST 19. EFI NO. 2	50 A H. EFI Relay   25 A I. Headlight Control Relay   10 A   10 A   10 A   10 A   10 A   10 A   15 A   30 A   40 A   15 A   7.5 A   7.5 A   10 A   15 A   7.5 A	
N		111732

ZOOM

SIZED FOR PRINT

Page 2 of 2

