

## Maintenance: Severe Service 30000 MI or 48000 KM

### Check

Brakes

*Inspect linings/drums and pads/discs*

### Inspect

Ball Joint Dust Cover, Lower

Ball Joint Dust Cover, Upper

Ball Joint, Lower

Ball Joint, Upper

Body and Frame

*Inspect nuts and bolts on chassis and body Inspect the nuts and bolts on the chassis and body.*

Brake Drum

Brake Hose

*Inspect Brake hoses and lines*

Brake Line

Brake Pad

Brake Rotor/Disc

Brake Shoe

Constant Velocity Joint Boot

Drive Belt

*Inspect non-ribbed drive belts*

Drive/Propeller Shaft

*Inspect the vehicles driveshaft boots.*

Exhaust System

*Inspect exhaust pipes and mountings*

Fuel Delivery and Air Induction

*Inspect fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses*

Fuel Supply Line

*Inspect the vehicles fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses.*

Steering

*Inspect steering gear box Inspect the vehicles steering gear box. Inspect the vehicles steering wheel, linkage and boots.*

(S) Steering and Suspension

*Inspect ball joints and dust covers, inspect steering linkage*

### Replace

(S) Air Filter Element

(S) Automatic Transmission Fluid

(B) Coolant

(S) Differential Fluid

Manual Transmission Fluid

(B) Oil

(S) Oil Filter, Engine

### Reseal

Fuel Filler Cap

*Replace fuel filler cap gasket*

### Rotate

Tires

-----  
(S) = Service Warranty Requirement

(E) = Emission Warranty Requirement

(B) = Both Service and Emission Warranty Requirement