

Page 1 of 2 Removal and Installation

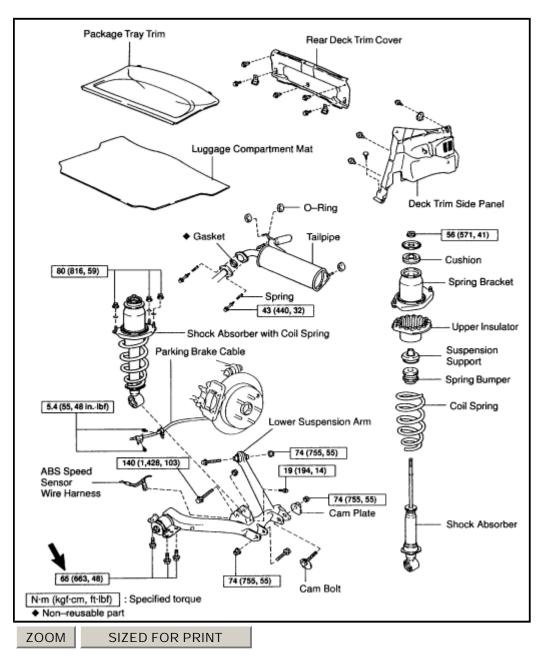

REMOVAL

- 1. REMOVE REAR WHEEL Torque: 103 Nm (1,050 kgf.cm, 76 ft. lbs.)
- 2. REMOVE PACKAGE TRAY TRIM
- 3. REMOVE LUGGAGE COMPARTMENT MAT
- 4. REMOVE REAR DECK TRIM COVER
- 5. REMOVE DECK TRIM SIDE PANEL
- 6. REMOVE REAR LOWER SUSPENSION ARM

Page 2 of 2

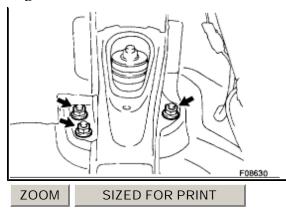

7. REMOVE REAR SHOCK ABSORBER Remove the 3 nuts and rear shock absorber. Torque: 80 Nm (816 kgf.cm, 59 ft. lbs.)

INSTALLATION

Installation is in the reverse order of removal.

HINT: After installation, check the rear wheel alignment.